



paracordplanet

Paracord Gun Sling



DIY Sling Kit includes:

- 14 ft. of color 1
- 16 ft. of color 1
- 14 ft. of color 2
- 16 ft. of color 2
- Webbing segment with sling swivel
- Detached sling swivel

Tools Needed:

- Scissors
- Lighter
- Ruler or yardstick

Instructions:

1. Melt one end of each 14 ft. cord and push them together (pictured on the right). Repeat with the 16 ft. cords (set them aside until step 14).



2. Fold the connected 14 ft. cords in half (just off center to hide the connection). Push the fold through the plastic end on the webbing.

3. Pull the two cord ends down through the loop. This knot is known as a lark's head or cow hitch.



4. Insert both ends up through the back of the square plastic ring. Position them between your existing wrapped cords.

5. Thread them down through the loop of the cow hitch again and pull tight. There should now be 4 wraps around the ring.



6. Thread the ends through the detached swivel. (Make sure that your colors are not twisted around each other.)

7. Wrap each cord around the swivel twice for a total of four wraps. Adjust the sling length so that the paracord portion measures 22”.



8. Begin the cobra weave by placing the left cord over the top of the middle two and underneath the right cord.



9. Bring the right cord around the back and up through the loop created by the left cord.



10. Pull the knot tight and mirror step 8. (Notice colors stay the same) Bring the right cord over the middle and under the left cord.



11. Bring the left cord around the back and up through the right loop. Pull the knot tight. Continue this back and forth pattern down the length of the sling.



12. Push the knots upward as you weave to eliminate gaps. When you reach the end, cut your cords 1/4” from the weave.




13. Melt each end with the lighter and flatten them against the weave using the side of your scissors.



14. Turn your sling around. Grab the connected 16 ft. pieces that you melted together in step 1 and hide the connection behind the end of your weave.



15. Weave another cobra weave over the top of the existing one. Make sure that the weave fits in between the bumps of the weave underneath.

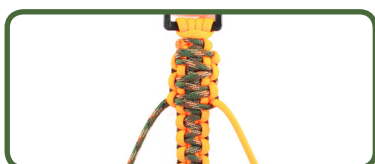

16. When you reach the end, cut your cords 1/4” from the weave. Melt with lighter and flatten against weave with scissors.

